



Hand in hand for tomorrow



Product data sheet

Quick change system SWS 041

Modular. Robust. Flexible.

Quick-change system SWS

Pneumatic tool changing system with patented locking system

Field of application

Can be used wherever short changeover times between a handling device and a tool (pallet, gripper)

Advantages – Your benefits

Complete series of 14 sizes for optimal size selection and a broad application range

Patented fail-safe locking mechanism for secure connection between the quick-change master and adapter

All functional components made from hardened steel for high mechanical resilience of the changing system

Wide range of signal, pneumatic, fluid and communication modules for universal energy transmission possibilities

Integrated pneumatic feed-through for a safe power supply of the handling modules and tools

Possibility of transmission of fluid systems with self-sealing couplings possible

Adapter side coding via plug connector possible

Suitable storage racks for all sizes to ensure the optimum adaption to each application

ISO mounting pattern for easy assembly to most types of robots without needing additional adapter plates



Sizes
Quantity: 14



Handling weight
1.4 .. 300 kg



Moment load Mx
2.8 .. 7170 Nm




Moment load Mz
3.45 .. 3800 Nm

Functional description

Automatic exchange of the end effector (e.g. gripper, pallets, vacuum gripping systems, pneumatically or electrically driven tools, welding guns, etc.) increases the flexibility of your robot.

The quick-change system (SWS) consists of a quick-change master (SWK) and a quick-change adapter (SWA). The SWK


is mounted onto the robot, and couples the SWA mounted onto your tool. A pneumatically driven locking piston, with its patented design, ensures that the connection is secure. After coupling, pneumatic and electric feed-throughs automatically supply your robot tool.

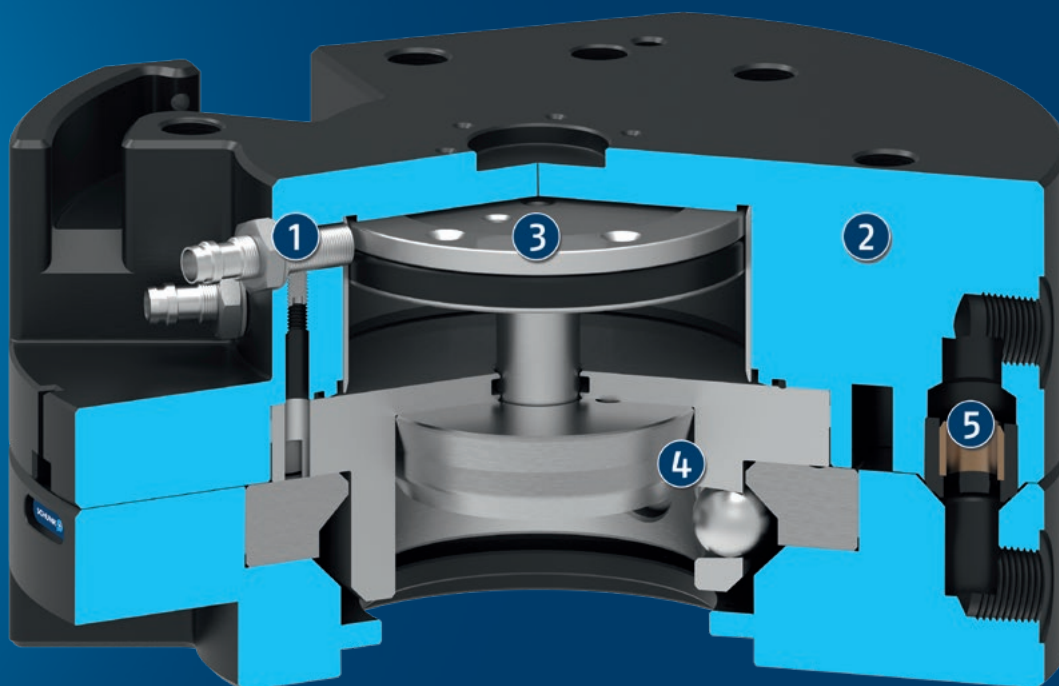

- ① **Sensor monitoring of the locking device**
optional, for process-reliable monitoring of the locking condition
- ② **Housing**
is weight-optimized due to the use of high-strength aluminum alloy
- ③ **Drive**
pneumatic, efficient, and easy to handle
- ④ **Locking mechanism**
load-free locking and unlocking, fail-safe in locked condition
- ⑤ **Air feed-through**
without interfering contours due to the integration into the housing. Also suitable for vacuum.

Detailed functional description

Sectional diagram SWS-001

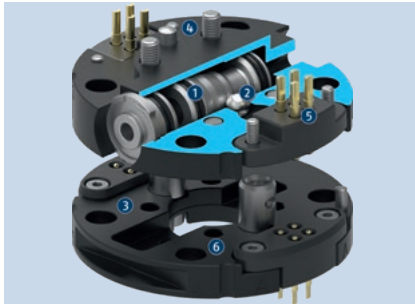


- ① Drive
pneumatic, efficient, and easy to handle
- ② Locking mechanism
load-free locking and unlocking, fail-safe in locked condition
- ③ Housing
is weight-optimized due to the use of high-strength aluminum alloy
- ④ Centering and mounting possibilities
by using a standardized ISO 9409 interface for robots
- ⑤ Electric feed-through
no interfering contour, as integrated in the housing
- ⑥ Air feed-through
without interfering contours due to the integration into the housing. Also suitable for vacuum.

Quick-change system in unlocked position




- ① Adapter plate
- ② Quick-change master SWK
- ③ Electrical module, robot-side
- ④ Locking mechanism
- ⑤ Locking ring
- ⑥ Quick-change adapter SWA
- ⑦ Electrical module, tool-side

Section view in ready-to-lock position

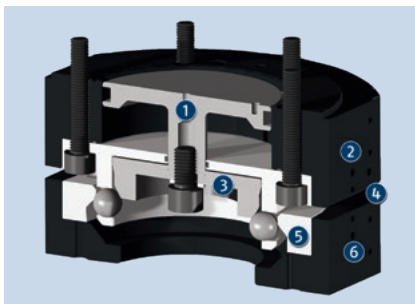


- ① Piston
- ② Quick-change master SWK
- ③ Locking piston
- ④ No-Touch-Locking™
- ⑤ Locking ring
- ⑥ Quick-change adapter SWA

Detail view of the locking ball position in ready-to-lock position

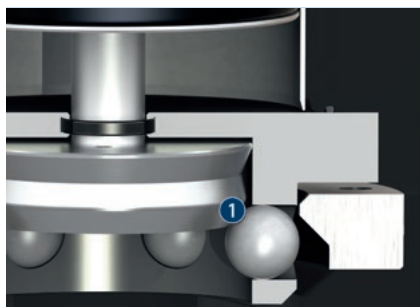


- ① Hardened locking ball is on the 1st taper of the cam. The 1st taper allows head and tool to be separated while locking.

Section view of the quick-change system in locked position

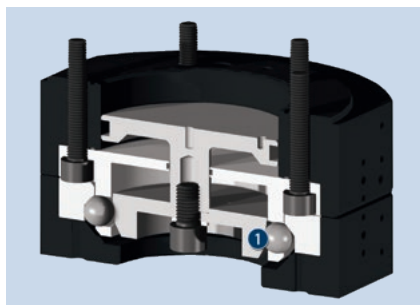


- ① When the piston is actuated, the locking balls are pushed under the hardened steel ring and the adapter is pulled onto the head.

Detail view of the locking ball in locked position

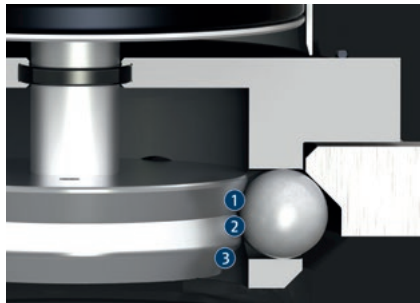


- ① Hardened steel balls on the 2nd taper of the cam create extremely high locking forces.
- ② Fail-safe reverse taper
- ③ 1st taper of the cam

Section view of the quick-change system in fail-safe position

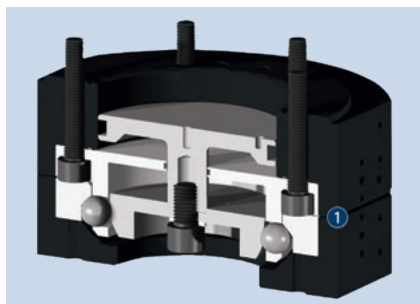

- ① The master and the adapter can only be separated from one another in the self-locking status if the piston is pneumatically actuated with the unlock air pressure.

Detail view of locking ball while in fail-safe position

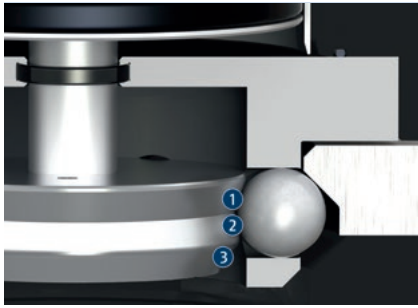

- 1 In the case of pressure loss, the locking piston is held in place by the cylindrical part of the locking piston. The friction from the piston seal prevents the piston from moving from its own weight or vibrations. The head and adapter can only be separated by pneumatic actuation of the piston.

- 2 Fail-safe reverse taper
- 3 1st taper of the cam

General notes about the series

Actuation: pneumatic, with filtered compressed air as per ISO 8573-1:2010 [7:4:4].

Operating principle: locking balls actuated by pistons for locking

Media transmission: variable via attachment feed-through modules, depending on the unit size

Housing: The housing consists of high-strength, hard-coated aluminum alloy. The functional components are made of hardened steel.

Warranty: 24 months

Service life characteristics: on request

Harsh environmental conditions: Please note that use under harsh environmental conditions (e.g. in the coolant area, cast and grinding dust) can considerably reduce the service life of the units, and we will not take over any warranty. However, in many cases we can find a solution. Please contact us for assistance.

Handling weight: is the weight of the total load attached to the flange. When designing, the permissible forces and moments have to be paid attention to. Please note that exceeding the recommended handling weight will shorten the lifespan.

Application example

Insertion tool for assembly of small to medium-sized workpieces. The tool can be used in both clean and dirty environments. Due to its quick-change system, other tools can alternately be fixed to the robot flange.

- ❶ Quick-change system SWS
- ❷ Electric feed-through
- ❸ Tolerance compensation unit TCU-Z
- ❹ 3-finger centric gripper PZN-plus



SCHUNK offers more ...

The following components make the product even more productive – the suitable addition for the highest functionality, flexibility, reliability, and controlled production.



Compensation unit



Anti-collision and overload protection sensor



Rotary feed-through



Universal gripper



Inductive proximity switch



Electronic module



Storage rack

① For more information on these products can be found on the following product pages or at schunk.com.

Options and special information

No-Touch-Locking™: Locking without touching. Ensures that the SWS is securely locked even when the SWK and SWA do not touch.

Patented fail-safe locking mechanism: A large piston diameter and an outside clamping locking increase the permissible moment capacity. Steel parts made of low corrosion Rc 58.

Selection of a quick-change system SWS

1. Determining the size

Quick Method:

When low or medium forces and moments act upon the SCHUNK quick-change system, you should choose a quick-change system with a payload comparable to that of your robot. If high moments and forces act upon the SCHUNK quick-change system, please use the following method, which is more precise.

More precise Method:

Forces and moments are critical factors in choosing a suitable quick-change system. Proceed as follows to estimate the most unfavorable moment:

- Calculate the approximate center of gravity (COG) of the heaviest end-effector that will be used. Calculate the distance (D) from the COG to the bottom of the quick-change adapter.
- Calculate the weight (W) of the heaviest end-effector.
- Multiply W and D to find an approximate static moment (M) (or a moment based on 1 g of acceleration).
- Choose a quick-change system with a high moment load equal to or greater than M.

Due to their potentially high accelerations, robots can produce moments that are two or three times as high as M.

2. Pneumatic and electrical systems

Determine the number of pneumatic connections and electrical contacts required. Larger quick-change systems feature a higher number of pneumatic connections and electrical contacts.

3. Temperature and chemicals

SCHUNK quick-change systems use nitrile gaskets for the feed-through of pneumatics. O-rings seal the pneumatic locking mechanism. These O-rings are resistant to most chemical influences and also withstand temperatures ranging from -25 to +65 °C. Please contact us if you should need information on temperatures or chemical influences in particular environments.

4. Precision applications

Always comply with the specifications if you work with applications that require high repeat accuracy.

Please note:

A quick-change system has an influence on force and moment, payload, size, and repeat accuracy of the robot.

SWS Sizes

Description	Recommended handling weight [kg]	Max. moment [Nm] M_x and M_y	Max. moment [Nm] M_z	Pneumatic feed-through	Air connections locked and unlocked
SWS 001	1.4	2.8	3.45	4x M5	M3
SWS 007	16	61	38	5x M5	M5
SWS 011	16	61	38	6x M5	M5
SWS 020	25	169.5	105	12x M5	M5
SWS 021	25	169.5	105	8x G1/8"	M5
SWS 029	35	169.5	230	2x G1/8" ; 4x M5	M5
SWS 040Q	50	471	648	8x G1/8"	G1/8"
SWS 041	50	471	648	6x G3/8"; 4x G1/8"	G1/8"
SWS 046	50	678	450	-	G1/8"
SWS 060	75	591	326	8x G1/8"	G1/8"
SWS 071	79	1185	378	8x G1/4"	G1/8"
SWS 076	100	1626	2103	5x G3/8"	G1/8"
SWS 110	150	2352	2352	8x G3/8"	G1/8"
SWS 160	300	7170	3800	5x G3/8"; 4x G1/2"	G1/8"
SWS-L 210	300	7600	4060	-	-
SWS-L 310	510	9900	9600	-	-
SWS-L 510	700	10900	10500	-	-
SWS-L 1210	1350	13500	16200	-	-


Ordering example SWS

	SW	K	-	110	-	R19	-	G19	-	SM
Description										
SW										
Page										
K = head (robot side)										
A = Adapter (tool side)										
Size										
Optional module										
Rxx, Sxx, Gxx, Kxx = electric module										
Pxx = pneumatic module (anodized aluminum housing, not suitable for liquids)										
Vxx = Vacuum module										
Fxx = Fluid module (stainless steel, self-sealing)										
000 = Unused option										
Proximity switch monitoring										
SG = Inductive proximity switch (SWK-040Q/076)										
SM = inductive proximity switch (SWK-007/022/029/110/160)										
SQ = Inductive proximity switch (SWK-011H/020H/021H)										
SIP-IN = monitoring prepared, inductive proximity switch included (SWK-011/020/021/027/041/046/060/071)										

More versions on request



Dimensions and maximum loads

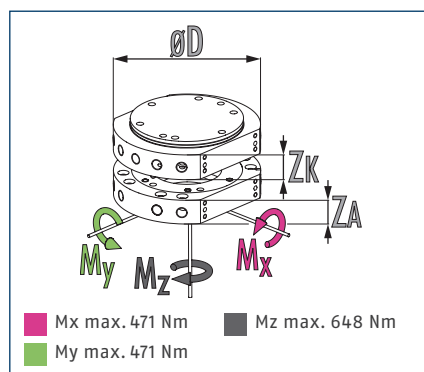

① This is the max. sum of all forces and moments which are permitted to act on the change system for ensuring proper functioning.

Technical data

Description		SWK-041-000-000	SWA-041-000-000
		Quick-change master	Quick-change adapter
ID		0302346	0302347
Recommended handling weight	[kg]	50	50
Piston stroke monitoring		optional	
Locking force	[N]	4500	4500
Repeat accuracy	[mm]	0.015	0.015
Weight	[kg]	1.4	0.7
Max. distance when locking	[mm]	3	3
Air connection thread pneumatic feed-through		6x G3/8"	6x G3/8"
Air connection thread pneumatic feed-through		4x G1/8"	4x G1/8"
Lock/unlock main connection		G1/8"	
Max. permissible XY axis offset	[mm]	±2	±2
Max. permissible angular offset	[°]	±2	±2
Min./max. ambient temperature	[°C]	5/60	5/60
Min./max. operating pressure	[bar]	4.5/6.9	4.5/6.9
Dimensions Ø D x Z*	[mm]	130 x 32.3	130 x 27
Screw connection diagram		J	J

* *Please note that the heights of the change master (ZK) and change adapter (ZA) differ. The sum represents the total height of a coupled change system.

Technical drawing of the SWK 041 and SWA 041 components, showing side and top views with dimensions and part numbers.

SWK 041 Side View (Left):

- Length: 59.5
- Mounting holes: M4/5 (4x), Ø4/5 (2x)
- Dimensions: 13.5±0.02, 50±0.02, 18, 4.5, 12.5°, 12.5°, 5.64±0.02, 32.01±0.02, 32.5±0.02, 57.6, 32.5±0.02
- Part numbers: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100

SWA 041 Side View (Right):


- Length: 40±0.02
- Mounting holes: M4/5 (4x), Ø4/5 (2x)
- Dimensions: 13.5±0.02, 50±0.02, 18, 4.5, 12.5°, 12.5°, 5.64±0.02, 32.01±0.02, 32.5±0.02, 57.6, 32.5±0.02
- Part numbers: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100

SWK 041 Top View (Bottom Center):

- Outer diameter: Ø130
- Inner diameter: Ø65
- Mounting holes: M5x40 DEI 4762 (6x), G1/8" (4x), G3/8" (6x), Ø8/10, Ø80, Ø6/10, Ø130
- Dimensions: 57.6, 32.5±0.02, 32.01±0.02, 32.5±0.02, 5.64±0.02, 12.5°, 12.5°, 6x60°, 40±0.02
- Part numbers: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100

96 Fit for centering

Storage system SWM-B

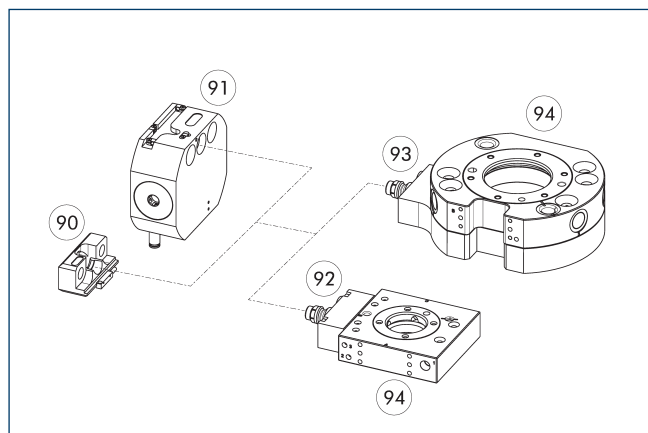


- 90 SWM-B 085
- 91 SWM-B 085-V
- 92 Side plate
- 93 Intermediate plate
- 94 Quick-change adapter SWA

Storage system with (-V) and without locking for safe tool storage. Detailed information and further accessories can be found in the catalog chapter "SWM-B" and "SWM."

Description	ID	
Storage system		
SWM-B 085	x1459339	
SWM-B 085-V	1442590	


Adapter plate SWA 041

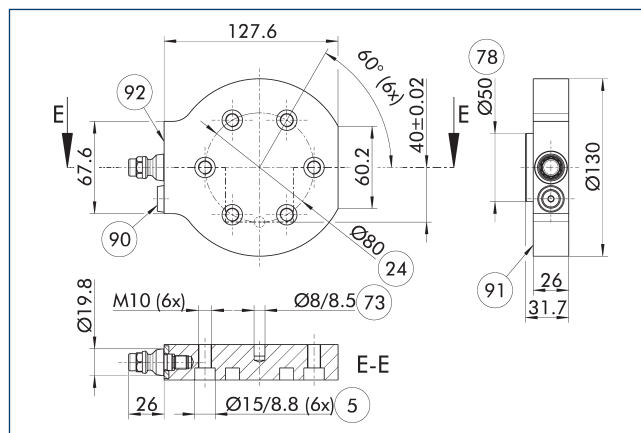

- 5 Through hole for connection with screws
- 24 Bolt circle
- 73 Fit for centering pins
- 78 Fit for centering
- 90 Anti-rotation protection (only for the SWM-B -V adapter plate)
- 91 Mounting side SWA
- 92 Attachment side SWM-B (-V)

Description	ID	Suitable for
Adapter plates		
A-SWA-041-SWM-B 085	x1523819	SWA 041
A-SWA-041-SWM-B 085-V	x1523860	SWA 041


Adapter plate design SWM-B

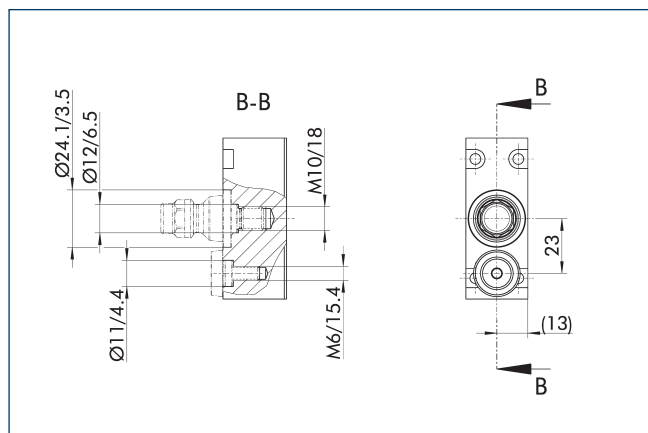

Instead of using a standard adapter plate, the storage pin and anti-twist protection can also be attached to a customized adapter plate. For error-free function, all dimensions according to the drawing must be taken into account, in particular the distances between the anti-twist protections to the storage pin. The drawing is also valid for all the standard plates listed below.

Description	ID	Suitable for
Adapter plates		
A-SWA-041-SWM-B 085	x1523819	SWA 041
A-SWA-041-SWM-B 085-V	x1523860	SWA 041

Adapter plate ISO-A100-SIP-R

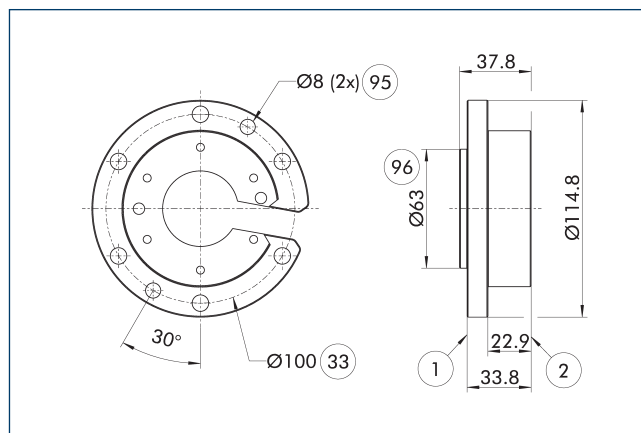


- 1 Robot-side connection
- 2 Tool-side connection
- 33 DIN ISO-9409 bolt circle
- 95 Fit for centering pins
- 96 Fit for centering

Robot side adapter plate

Description	ID	
Robot side		
A-SWK-040/041-ISO-A100-SIP	0302232	

- ① Adapter plate for quick change master with piston stroke control

Adapter plate ISO-A100-R

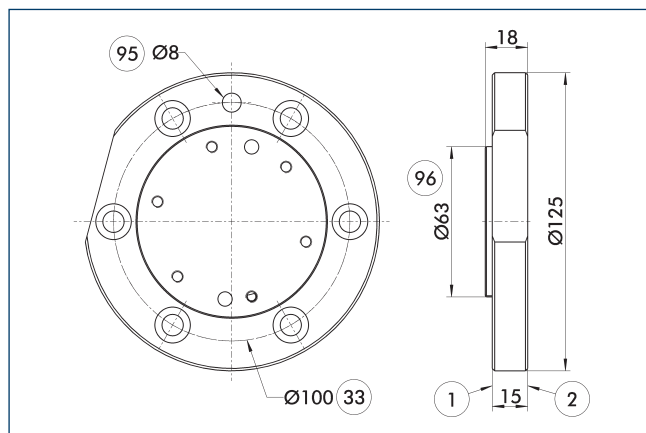


- ① Robot-side connection
- ② Tool-side connection
- ③③ DIN ISO-9409 bolt circle
- ⑨⑤ Fit for centering pins
- ⑨⑥ Fit for centering

Robot side adapter plate

Description	ID	
Robot side		
A-SWK-041-ISO-A100	0302206	

- ① Adapter plate for quick change master without piston stroke control

Adapter plate ISO-A80-R

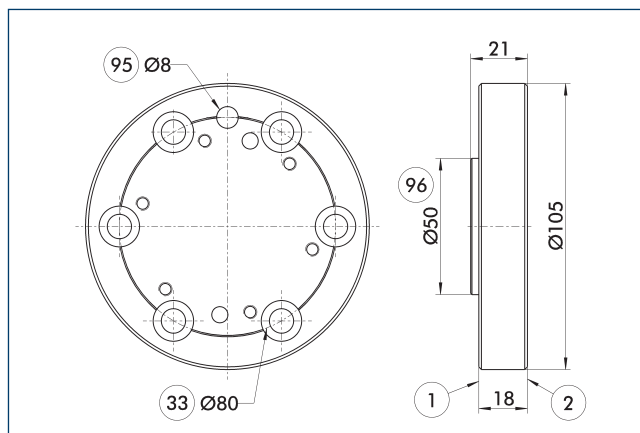


- ① Robot-side connection
- ② Tool-side connection
- ③③ DIN ISO-9409 bolt circle
- ⑨⑤ Fit for centering pins
- ⑨⑥ Fit for centering

Robot side adapter plate

Description	ID	
Robot side		
A-SWK-041-ISO-A80	0302205	

- ① Adapter plate for quick change master without piston stroke control

Adapter plate ISO-A80-SIP-R

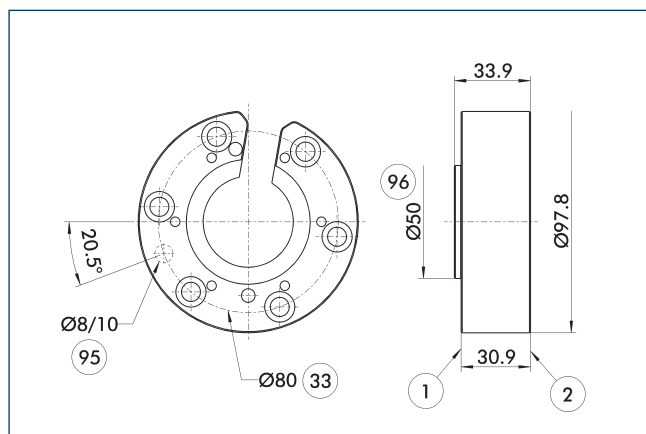


- ① Robot-side connection
- ② Tool-side connection
- ③③ DIN ISO-9409 bolt circle
- ⑨⑤ Fit for centering pins
- ⑨⑥ Fit for centering

Robot side adapter plate

Description	ID	
Robot side		
A-SWK-041-ISO-A80-SIP	0302235	

- ① Adapter plate for quick change master with piston stroke control

Electric feed-through module

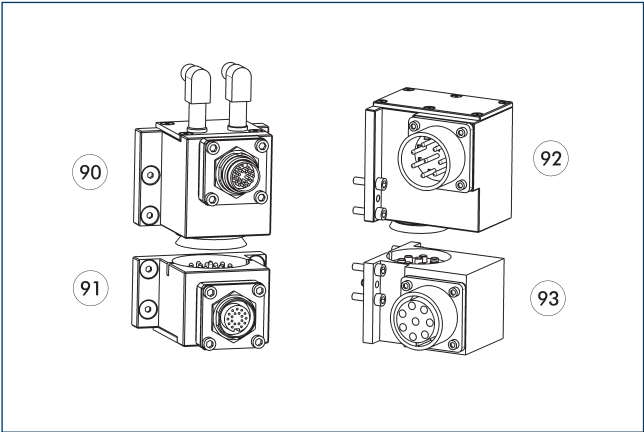

- 90 Electric module with metric thread, robot-side

91 Electric module with metric thread, tool-side
- 92 Electric module with MIL-Spec thread, robot-side


93 Electric module with MIL-Spec thread, tool-side

Modules for transmission of electrical signals.

Description	ID	No. Pins
Feed-through module for communication on the robot side		
SW0-RE5-K	9957444	
Feed-through module for communication on the tool side		
SW0-RE5-A	9957445	
Feed-through module for power on the robot side		
SW0-MT8-K	9937157	
Feed-through module for power on the tool side		
SW0-MT8-A	9937158	
Feed-through module for signal on the robot side		
SW0-G19-K	9940649	19
SW0-R19-K	9935815	19
SW0-R19W-K	9942041	15
SW0-R26-K	9935819	26
SW0-RF19-K	9948654	19
Feed-through module for signal on the tool side		
SW0-G19-A	9940650	19
SW0-R19-A	9935816	19
SW0-R26-A	9935820	26
SW0-RF19-A	9948657	19

For more detailed information and further modules and matching cable connectors, see catalog chapter "SW0" or visit our website.

Cable plug/cable extension

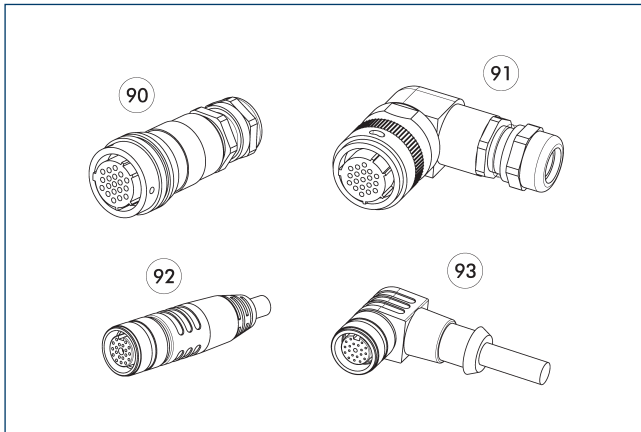


- 90 Plug/socket straight
 91 Connector/angled socket
 92 Connector/straight socket with extension cable
 93 Connector/angled socket with extension cable

Other cable lengths on request.

Description	ID	Length
		[m]
Angled cable connector, robot-side		
KAS-19B-K-90-C	0301294	
KAS-19F-K-90	1316879	
KAS-26B-K-90-C	0301296	
KAS-36B-K-90	0301274	
Angled cable connector, tool-side		
KAS-19B-A-90-C	0301295	
KAS-19F-A-90	1316873	
KAS-26B-A-90-C	0301297	
KAS-36B-A-90	0301275	
Angled cable connector with cable, robot-side		
KV-5-SWK-19B-90	0302190	5
KV-5-SWK-19F-90	0302172	5
Angled cable connector with cable, tool-side		
KV-3-SWA-19B-90	0302191	3
KV-3-SWA-19F-90	0302175	3
Straight cable connector, robot-side		
KAS-08G-K-0	0301268	
KAS-19B-K-0-C	0301283	
KAS-19F-K-0	1351134	
KAS-26B-K-0-C	0301290	
KAS-36B-K-0	0301272	
Straight cable connector, tool-side		
KAS-08G-A-0	0301269	
KAS-19B-A-0-C	0301284	
KAS-19F-A-0	1351135	
KAS-26B-A-0-C	0301291	
KAS-36B-A-0	0301273	
Straight cable connector with cable, robot-side		
KV-5-SWK-19B-0	0302177	5
KV-5-SWK-19F-0	0302170	5
Straight cable connector with cable, tool-side		
KV-3-SWA-19B-0	0302178	3
KV-3-SWA-19F-0	0302174	3

① Detailed information and further cable connectors can be found at schunk.com

Pneumatic/ fluidic feed-through modules

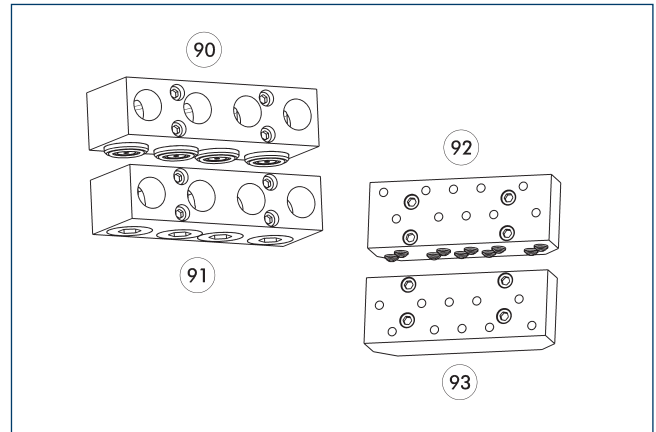


- 90 Self-sealing fluid module, robot-side
 91 Self-sealing fluid module, tool-side
 92 Pneumatic module, robot-side
 93 Pneumatic module, tool-side

Modules for transferring fluids (air, vacuum or fluid).

Description	ID	No. of fluid feed-throughs
Feed-through module for liquids on the robot side		
SW0-FG2-K	9936817	2
Feed-through module for liquids on the tool side		
SW0-FG2-A	9936818	2
Feed-through module for pneumatics on the robot side		
SW0-P8M5-K	9872067	8
Feed-through module for pneumatics on the tool side		
SW0-P8M5-A	9872068	8

① For other pneumatic and fluid modules, see catalog chapter "Options" or visit our website.


Piston stroke control

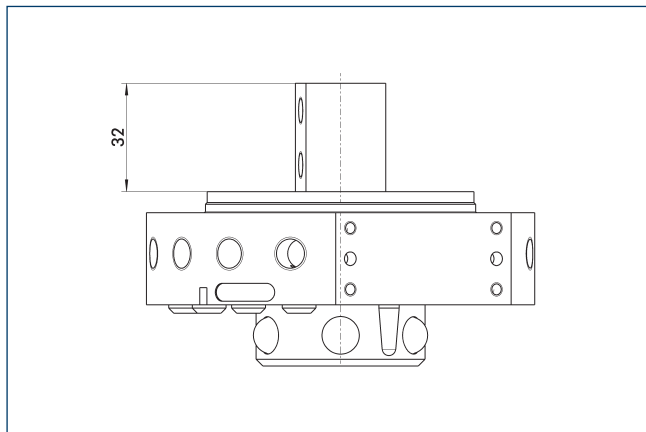

The drawing shows the minimal height of the adapter plate for installing a piston stroke control.

Description	ID	
Piston stroke control		
SWK-041-SIP	0302348	


Piston stroke control

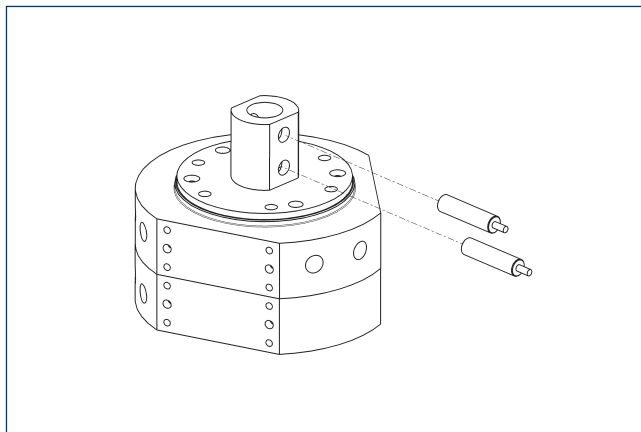

Description	ID	Often combined
Inductive proximity switch		
IN 80-S-M12	0301578	
IN 80-S-M8	0301478	
INK 80-S	0301550	
Connection cables		
KA BG08-L 3P-0300-PNP	0301622	●
KA BG08-L 3P-0500-PNP	0301623	
KA BG12-L 3P-0500-PNP	30016369	
KA BW08-L 3P-0300-PNP	0301594	
KA BW08-L 3P-0500-PNP	0301502	
KA BW12-L 3P-0300-PNP	0301503	
KA BW12-L 3P-0500-PNP	0301507	
Clip for connector/socket		
CLI-M12	0301464	
CLI-M8	0301463	
Cable extension		
KV BG12-SG12 3P-0030-PNP	0301999	
KV BG12-SG12 3P-0060-PNP	0301998	
KV BW08-SG08 3P-0030-PNP	0301495	
KV BW08-SG08 3P-0100-PNP	0301496	
KV BW08-SG08 3P-0200-PNP	0301497	●
KV BW12-SG12 3P-0030-PNP	0301595	
KV BW12-SG12 3P-0100-PNP	0301596	
KV BW12-SG12 3P-0200-PNP	0301597	
Sensor distributor		
V2-M12	0301776	●
V2-M8	0301775	●
V4-M8	0301746	
V8-M8	0301751	

- ① Per unit two sensors (closer/S) are required for each unit, as well as extension cables on option. Please consider the minimum permissible bending radii for sensor cables. These are generally 35 mm.

Adapter plate design

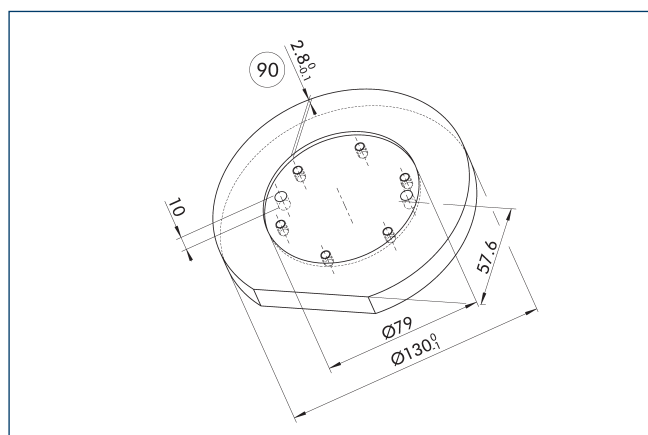

- 90 Recommended adapter plate depth

Recommendation for the design of the adapter plate.



SCHUNK SE & Co. KG

Spanntechnik

Greiftechnik

Automatisierungstechnik

Bahnhofstr. 106 - 134

D-74348 Lauffen/Neckar

Tel. +49-7133-103-0

Fax +49-7133-103-2399

info@de.schunk.com

schunk.com

Folgen Sie uns | *Follow us*

