

Load limits Jaw quick-change system BSWS

		catalog values*			internal values**	
ID	name	maximum torque My	maximum torque Fx	maximum force Fz	maximum torque Mx	maximum torque Mz
		[Nm]	[N]	[N]	[Nm]	[Nm]
Jaw quick-change system, BSWS						
303021	BSWS-B 50	14	350	335	13,5	3,75
303023	BSWS-B 64	29	510	650	23,5	13,25
303025	BSWS-B 80	63	1080	1250	33,5	13,75
303027	BSWS-B 100	105	1960	1350	43,5	20
303029	BSWS-B 125	225	2815	2500	83,5	34,25
303031	BSWS-B 160	310	5360	5000	95	50
303033	BSWS-B 200	510	6110	6000	107,5	62,5
303035	BSWS-B 240	880	9330	7000	140	65
303037	BSWS-B 300	1220	12430	4000	200	62,5
tool-free jaw quick-change system, BSWS-M						
1313899	BSWS-BM 50	14	350	335	13,5	3,75
1313900	BSWS-BM 64	29	510	650	23,5	13,25
1313901	BSWS-BM 80	63	1080	1250	33,5	13,75
1313902	BSWS-BM 100	105	1960	1350	43,5	20
1302006	BSWS-BM 125	225	2815	2500	83,5	34,25
1418962	BSWS-BM 160	310	5360	5000	95	50
1419306	BSWS-BM 200	510	6110	6000	107,5	62,5
1470901	BSWS-BM 240	880	9330	7000	140	65
1462015	BSWS-BM 300	1220	12430	4000	200	62,5
Automatic jaw quick-change system, BSWS-R						
1555889	BSWS-BR 50	14	350	335	13,5	3,75
1555914	BSWS-BR 64	29	510	650	23,5	13,25
1555917	BSWS-BR 80	63	1080	1250	33,5	13,75
1555933	BSWS-BR 100	105	1960	1350	43,5	20
1555937	BSWS-BR 125	225	2815	2500	83,5	34,25
1555940	BSWS-BR 160	310	5360	5000	95	50
1555942	BSWS-BR 200	510	6110	6000	107,5	62,5
1555943	BSWS-BR 240	880	9330	7000	140	65
1555944	BSWS-BR 300	1220	12430	4000	200	62,5

* The load limits M_y and F_x and F_z can also be found in the respective BSWS catalog chapters.

** The M_x and M_z moments are intended to serve as a guide for the technical design of the products and are for internal use only.